




T-10 Users Manual


1. Product Description

T-10 is a clip tuner. Portable design makes it easy to go with you, and it can be easily rotated in different directions and angles.

2. Outside view

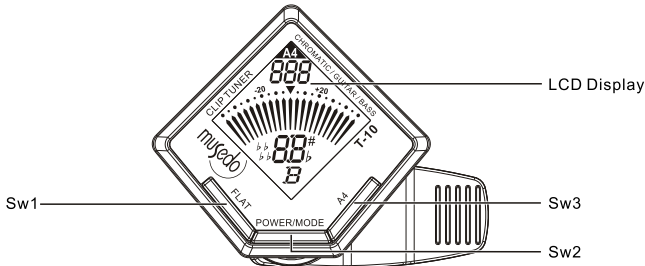


3. LCD Display

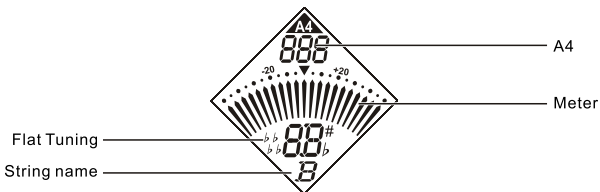

4. Product Description

1. Features

- Tuning item: Chromatic, Guitar, Bass (4 Strings)
- Flat tuning: ♭, ♭♭, ♭♭♭, ♭♭♭♭
- A4: 430~450Hz
- Display: Orange backlit LCD
- Energy saving function: the tuner will automatically turn off if there is no signal for 3 minutes
- Tuning mode: Vibration

 *Note: When in Chromatic mode, the T-10 only displays the note name. In Guitar mode or Bass mode, it shows both the string name and note name. A4 Calibration is adjustable in any mode.*

2. Operation:

Three buttons:

- Sw1 Flat: natural → ♭ → ♭♭ → ♭♭♭ → ♭♭♭♭ → natural
- Sw2 Power/Mode: press Power/Mode button for 2 seconds to turn on the T-10, Press Power/Mode button to choose Chromatic Mode → Guitar Mode → Bass Mode → Chromatic Mode
- Sw3 A4: adjusts A4 from 430Hz → 450Hz

5. Specifications

- Tolerance: ±3 cents
- Tuning range: A0~A6 (27.5Hz~1760Hz)
- Power consumption:
 - A. Tuning mode: <15mA
 - B. Power off: 1uA