




## MT-40W METRO-TUNER Owner's manual

Thank you and congratulations on your purchase of Musedo MT-40W. Please read this manual carefully before using it for the first time. Keep the manual for future reference.

### Product

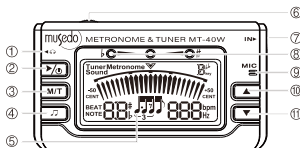

- |                        |                      |
|------------------------|----------------------|
| ① EARPHONE JACK        | ⑦ INPUT JACK         |
| ② POWER/PLAY           | ⑧ LED INDICATOR      |
| ③ MODE TUNER/METRONOME | ⑨ MIC                |
| ④ RHYTHM/FLAT          | ⑩ PARAMETER ADJUST ▲ |
| ⑤ LCD                  | ⑪ PARAMETER ADJUST ▼ |
| ⑥ VOLUME CONTROLLER    |                      |

### Operation

#### Tuner

- Press ② for 2 seconds to turn on/off MT-40W. The default mode is Tuner when MT-40W is powered on. It will power off automatically if there is no input signal or operation in 5 minutes.
- Press ③/⑪ to set A4:430Hz~450Hz.
- Press ④ to set tuning items: Ckey, Fkey, B-key, E-key.
- When it is in tune, the LCD backlight turns to green and the middle green LED indicator turns on. When it is sharp, the LCD backlight turns to orange and the right red LED indicator turns on. When it is flat, the LCD backlight turns to orange and the left red LED indicator turns on.

#### Tone Generator

- Press ② briefly to enter the Tone Generator mode.
- Press ④ to set the key: Ckey, Fkey, B-key, E-key.
- Press ③/⑪ to set the notes: Chromatic(2A~6A).
- Press ② briefly to stop playing and return to Tuner mode.

#### Metronome

- Press ② for 2 seconds to enter Metronome mode.
- Press ③/⑪ to set the TEMPO: 30~250 bpm.
- Press ④ briefly to set beat: 0~9.
- Press ③/⑪ to set the RHYTHM:



