

内容详见2、3页

说明： ※V1版，应国内市场部要求增加了中文说明书，上有三包政策和公司地址。 ※材料80g书写纸 ※折法详见附页 ※尺寸：120x260mm ※请送样品确认	作废	_____
	作废	_____
	作废	_____
	作废	_____
	作废	_____


日期	2011.01.08	名称	MT-30中英文说明书		料号		版本	V1	
设计		文件名	MT-30中英文说明书.cdr		光盘号	_____	材料	80g书写纸	
内容审核		视角	_____	单位	毫米(mm)	颜色	_____	图号	
批准		 深圳市睿科电子科技有限公司 CHERUB TECHNOLOGY COMPANY LIMITED				尺寸公差	±0.3mm	密级	普通
								第(1)页，共(3)页	



使用说明书

MT-30 节拍校音器

一. 版面操作及显示示意图

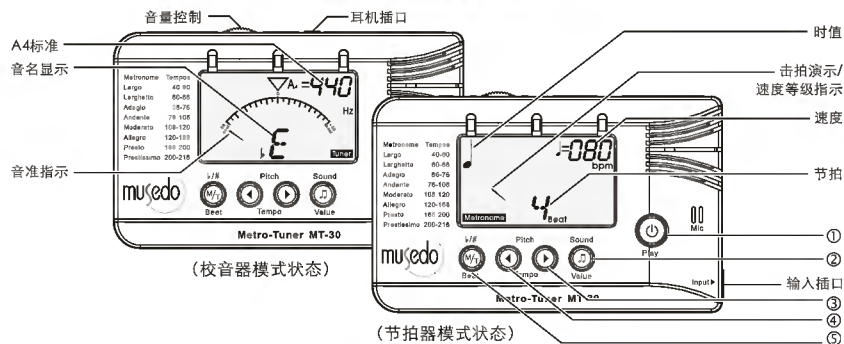

二. 使用指南

功能	按键操作	显示或备注	
1. 开/关电源	按住①键保持两秒	开机后恢复上一次关机前状态, 有自动关机功能	
2. 转换模式	按住⑤键保持两秒	校音器模式 ↔ 节拍器模式	
校音器状态	调节半音显示模式	按③键	
	调整A4频率	按③键或④键	435-----445Hz范围内设置
	定音器	按②键发A4音, 发音时, 按③键或④键选择发其他音 ^{注1}	按①、②或④键停止发音
	自动校音	不需要按键操作	当收到有效乐声时, 自动显示音名和音分偏差
节拍器状态	节拍演示	按①键	启动或停止节拍演示
	选择节拍	按⑤键	依次显示 4、3、2、1、0、9、7、6、5 拍
	设置速度	按③键或④键	30-260bpm 230级设置
	设置时值	按②键	显示当前时值 ^{注2}
	击拍测速	同时按③键和④键进入测速状态, 击①键	发音并显示击拍速度, 无输入4秒后自动返回。

注1: 按③键依次选择发第四组的C、D、E、F、G、A、B音, 按④键依次选择发第四组的♯C、♯D、♯E、♯F、♯G、♯A音。

注2: 按②键依次循环选择以下时值: ♩, ♪, ♫, ♬, ♮, ♭, ♭♭, ♭♭♭

三. 应用举例

- 用本品对吉他进行校音: 按住①键保持两秒, 开机, 按住⑤键保持两秒, 转换至校音器模式, 将校音器放置在离吉他30CM之内。用肉指拨吉他的1弦, 屏幕将显示“E”, 音准指示音分偏差, 左偏表示音低, 需加紧吉他弦, 反之, 则放松吉他弦。如果屏幕显示的是“B”则说明音偏低, 而且偏高的比较多, 需加紧吉他弦。
- 如果使用环境比较嘈杂, 则可使用附件配置的拾音器, 插头插在输入插口处, 夹子夹在共鸣箱边沿或吉他顶部, 不要接触吉他弦影响发音即可。
- 其它弦按1弦的方法, 对照右边的吉他弦序音位图。



四. 技术规格

- 电源: 3V (两节7号电池)
- 体积: 100.2mm(宽)X62mm(高)X15mm(厚)
- 色泽: 黑色
- 校音状态:
 - 校音范围: A0(27.5Hz)-a3(1760Hz)
 - 校音精度: 2cent
 - 发音精度: 0.5cent
 - A4音示范: 435-445Hz
- 节拍器状态:
 - 速度: 30-260bpm(误差: <5%)
 - 节拍: 4、3、2、1、0、9、7、6、5
 - 时值: ♩, ♪, ♫, ♬, ♮, ♭, ♭♭, ♭♭♭
 - 速度等级指示:
 - Largo-----40-60 Moderato-----108-120
 - Larghetto-----60-66 Allegro-----120-168
 - Adagio-----66-76 Presto-----168-200
 - Andante-----76-108 Prestissimo-----200-216

五. 随机包装附件

- 7号干电池2粒
- 拾音器

质量承诺

亲爱的用户:
在您使用Musedo产品时, 请仔细阅读产品说明书, 当您有疑问和困难时, 请拨打售后服务热线: 133 0293 1293

- 一周内出现质量问题可退货退款
- 一年内出现质量问题可免费维修
- 一月内出现质量问题可调换
- 终身享有咨询和维修服务

[请向销售商索取有效购买凭证并予以保存]

换修政策

- 一. 包换政策:**
 1. 消费者自购机之日起1个月之内, 在正常使用情况下, 出现非人为的产品性能故障, 且产品外观及包装保持完好可向所购机的经销商换机。
 2. 消费者在换机时应出示由经销商开出的购机收据及保修卡, 否则经销商可以不予更换。
- 二. 保修政策:**

产品在购买之日起1年内, 可免费享有维修服务; 对于超过1年的产品及人为或不可抗力因素造成损坏的产品, 我司可提供有偿维修服务。


深圳市南山区松白路西丽南岗第二工业园A2栋5-6楼
深圳市蔚科电子科技有限公司售后服务部
邮编: 518108



Owner's manual

MT-30 METRONOME-TUNER

Obverse Operation Display

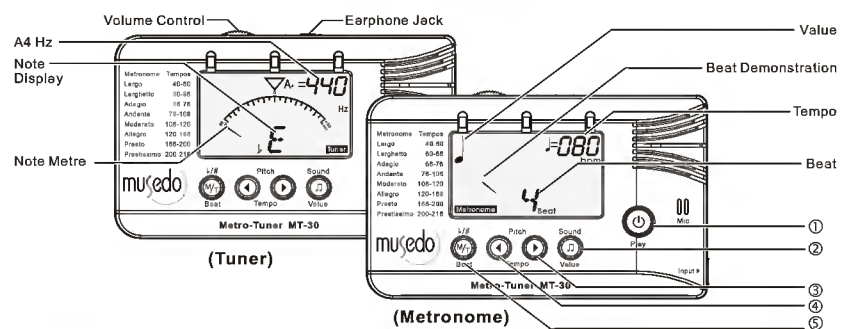

Operation Guide

Function	Operation	Display or Remark	
1. Power On/Off	Keep pressing button ① for 2 seconds	Automatically off available	
2. Transferring Mode	Keep pressing button ⑤ for 2 seconds	Tuner ↔ Metronome	
Tuner Mode	Half-note Display mode Chosing	Press button ③	
	Calibration	Press button ③ or ④	From 435 to 445Hz
	Tone Generator	Pressing button ② changing note by pressing ③ or ④	Stop by pressing button ①, ② or ④; Note 1
Metronome Mode	Beat Demo	Press button ①	Start or stop beat demo
	Selecting Beat	Press button ⑤	0、1、2、3、4、5、6、7、9
	Set up Tempo	Press button ③ for tempo up or ④ for tempo down	30-260bpm. 230 steps
	Set up Value	Press button ②	The current value will be displayed Note 2
	Tap	Press button ③ and ④ at one time to start the tap function, tap button ① for measuring your tapping tempo.	Automatically return to initial state if no tapping.

Note 1: Press button ③ to select the sound in turn with C, D, E, F, G, A, B. Press button ④ to select the sound in turn with ♯C, ♯D, ♯E, ♯F, ♯G, ♯A.

Note 2: Press button ② to select the value in turn with ♩, ♪, ♫, ♬, ♮, ♭, ♭♭, ♭♭♭

Application

- For guitar tuning, please refer to the note indication diagram on the right.



Specification

- Power: 3V (AAA battery 2 pieces)
- Volume: 100.2mm(W)X62mm(H)X15mm(D)
- Colour: Black
- Tuner:
 - Tuning Range: A0(27.5Hz)-a3(1760Hz)
 - Tuning accuracy: 2cent
 - Tone generator accuracy: 0.5cent
 - A4: 435-445Hz
- Metronome:
 - Tempo: 30-260bpm (Tolerance: <5%)
 - Beat: 0、1、2、3、4、5、6、7、9
 - Value: ♩, ♪, ♫, ♬, ♮, ♭, ♭♭, ♭♭♭
 - Tempo Degree:
 - Largo-----40-60 Moderato-----108-120
 - Larghetto-----60-66 Allegro-----120-168
 - Adagio-----66-76 Presto-----168-200
 - Andante-----76-108 Prestissimo-----200-216


Accessories Included

- 2 batteries (AAA size)
- Pickup

Replacing The Battery

- If it can not work properly, please take out batteries and replace them again.
- When the display is not clear, please replace with new batteries.

 1. Slide the battery cover on the back of the MT-30 in the direction indicated by the arrow in the diagram, and take off the battery cover.
 2. Take out the old battery and insert the new one, being careful that the polarity is matched correctly.
 3. Slide the cover in the opposite direction from that indicated by the arrow, and attach it in its original position.



www.musedo.com

折法图

步骤一



步骤二



步骤三

